



PROPER USE AND MOUNTING INSTRUCTIONS

1. Position packaged slip ring assembly onto shaft and fix slip ring rotor shaft with 2x set screws or alternatively cement shaft with suitable adhesive.
2. Align anti-rotation pin or screw with slot in anti-rotation arm or housing.
3. Fully engage pin or screw into slot.
4. Ensure that terminations are correctly wired and retained as necessary.



ROTARY
SYSTEMS INC