



## PROPER USE AND MOUNTING INSTRUCTIONS

1. Bolt industrial slip ring assembly rotor to shaft using fixing flange
2. Align slot of anti-rotation bracket with suitably fitted conduit connection.
3. Fully engage conduit fitting into slot.
4. Ensure that terminations are correctly wired and retained as necessary.

