



PROPER USE AND MOUNTING INSTRUCTIONS

1. Fit capsule slip ring assembly into location of housing/hardware and bolt through (4x).
2. Align slip ring rotor drive pins with slot in hollow shaft
3. Fully engage pin into slot.
4. Ensure that terminations are correctly wired and retained as necessary.

